

TOUGHBOLT INSTALLATION INSTRUCTIONS


For best results, review all steps and parts before installation

TOUGHBOLT
RAISING SLIDING DOOR SECURITY
TOUGHBOLT.COM



Tools needed:

- Drill with 1/8" bit
- Medium Phillips Screwdriver
- Pencil
- Small Flathead Screwdriver or Knife

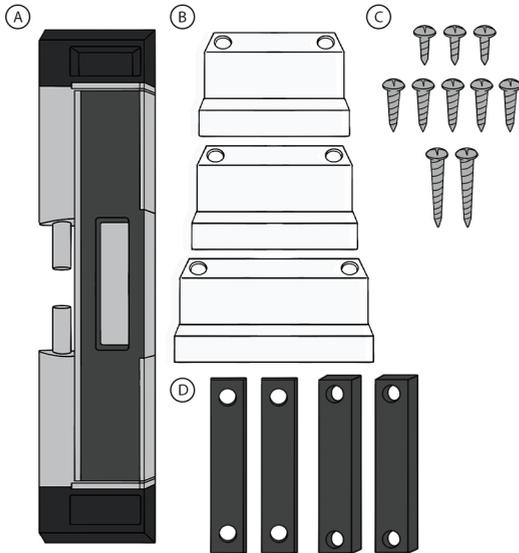


- A – TOUGHBOLT Base (1)
- B – Deadbolt Receiver Latches 3 Size Variants (3)
- C – Mounting Screws (3 Small, 5 Big, and 2 Long)
- D – Latch Spacers (2 Thin and 2 Thick)

STEP - 1

REMOVE FACEPLATE


Using a small screwdriver or knife, gently remove a plastic faceplate, exposing the inside of TOUGHBOLT lock and the screw holes as pictured below:

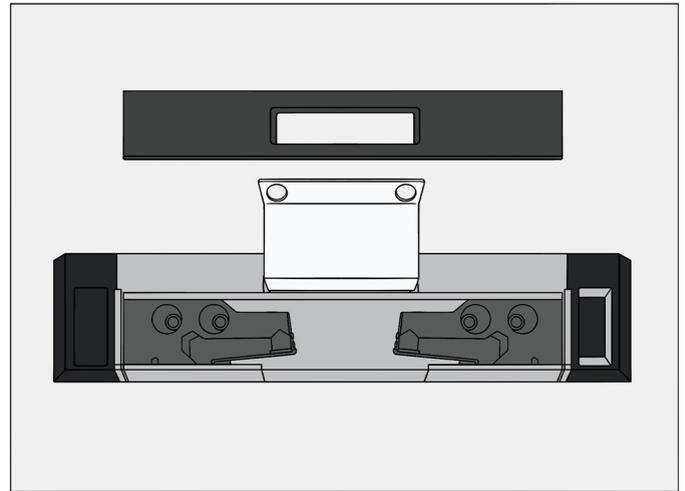

STEP - 2

Mark Location of TOUGHBOLT Latch (Choose Inside or Outside)


1. Inside track latch mount: With faceplate cover removed, hold the TOUGHBOLT lock base and latch at the desired height and mark the correct location of the latch with the pencil. Remove the latch from the TOUGHBOLT base and with one hand, hold the latch and mark the two holes on the inside of door jamb where the screws will be installed. Prior to installing inside of track, test sliding the door over the latch – some doors do not have enough clearance for the latch and require exterior mounting.

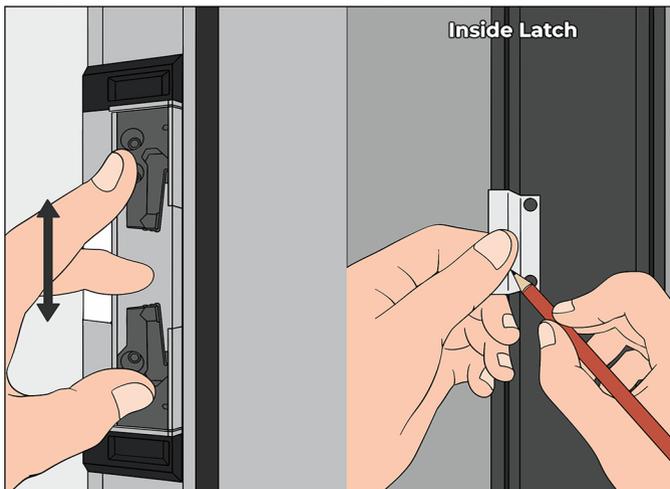

STEP - 2b

2. Outside track latch mount: Same as the inside latch mount, except the latch is mounted on the outside of the track as pictured below:

NOTE: Customers report higher satisfaction with the outside mount, citing improved performance despite a less refined appearance.

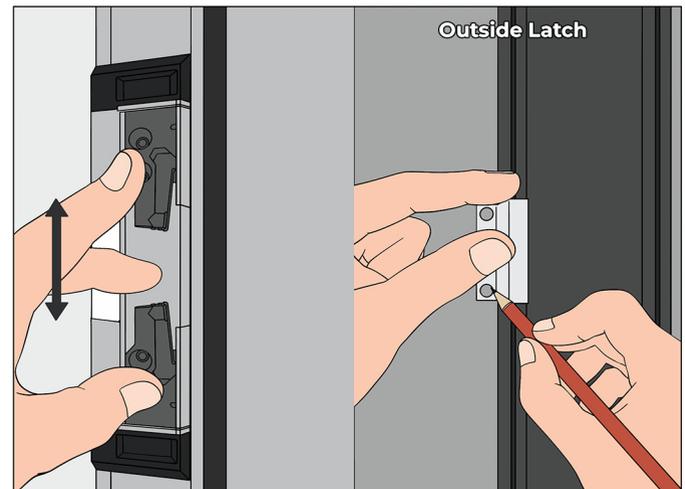




STEP - 3

Attach the Latch to Inside or Outside of Door Track


Using a 1/8" (3.2mm) drill bit, drill the two holes for the latch that were previously marked. Depending on the depth of the door track, use the smallest latch that will allow the lock base to fit on the door frame. Additionally, thick spacers and longer screws are provided for deep door tracks. Do not overtighten screws!

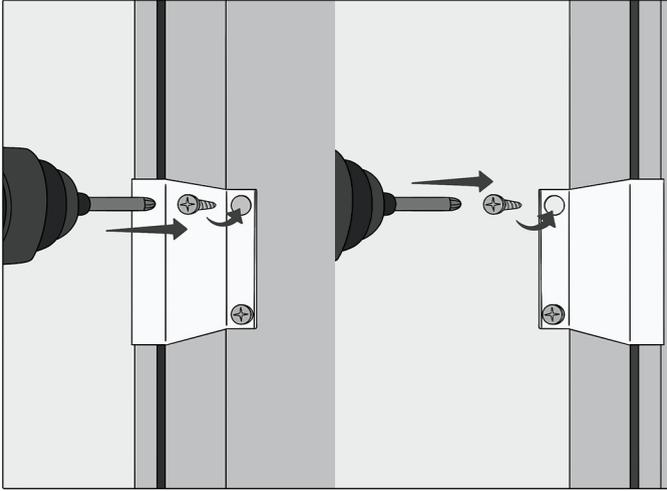

STEP - 4

Align Lock Base on Door

With the latch screwed into door jamb, center the latch to the TOUGHBOLT lock base and align it as pictured below, closing the door to identify correct location. Once aligned, mark the four holes with a pencil.

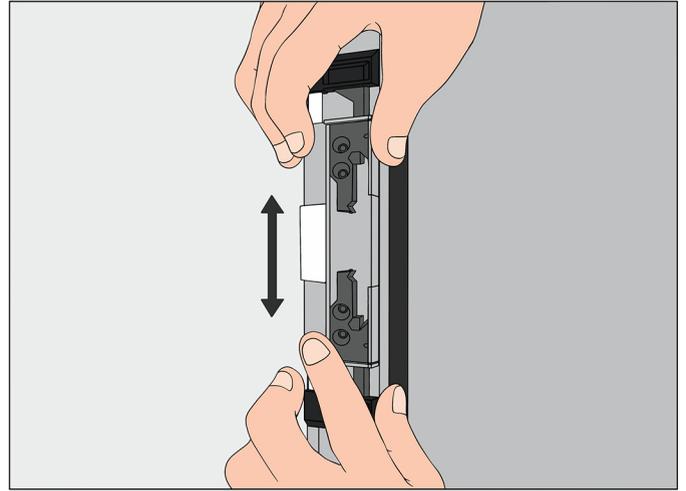


STEP - 5

Attach the Lock Base To Door

Using same drill and bit, drill holes just marked, then screw in the screws being careful not to overtighten.


Caution: When drilling holes in the door frame be sure that the drill and screws do not come close to or in contact with glass as it can cause it to shatter.

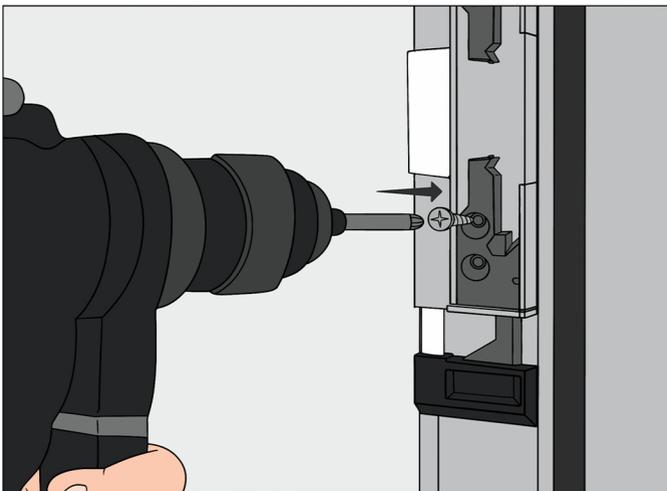

STEP - 6

Attach Faceplate

Gently snap the faceplate cover back into base. Faceplate can be bent to reshape if necessary.

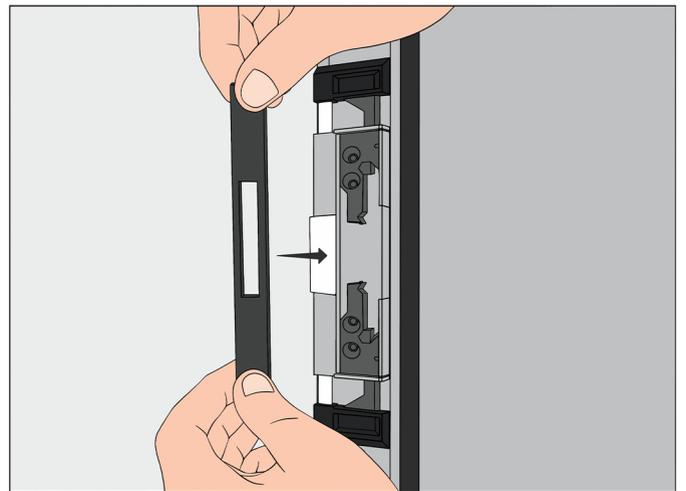

Should you have questions or concerns
Please reach out to us at
Support@TOUGHBOLT.COM

Thank you for choosing the TOUGHBOLT Double-Deadbolt Sliding Door Lock.
If you're satisfied with your purchase, please consider leaving a review. Your support makes a big difference for our small business!